



NOTE:
MANIFOLD LOCATORS SHOWN ARE SUPPLIED OVERSIZE AND MUST BE GROUND AND FITTED ("BLUED-IN") TO THE MOLD.

MANIFOLD LOCATOR OPTIONS	
MANIFOLD LOCATOR #	USED WITH MANIFOLDS WHEN:
ML0006	NO THRUST LOADS FROM MACHINE NOZZLE ARE PRESENT OR WITH SMALL PITCH MANIFOLDS
ML0015	MACHINE NOZZLE THRUST LOADS ARE PRESENT
ML0030	MACHINE NOZZLE THRUST LOADS ARE PRESENT (ONLY IF PLATE SPLIT PREVENTS USE OF ML0015)
ML0040	MACHINE NOZZLE THRUST LOADS ARE PRESENT (FOR SMALL PITCH MANIFOLDS)