



JUNIPER®

FLUTES DORIAN ARRAY Remote Installation Guide

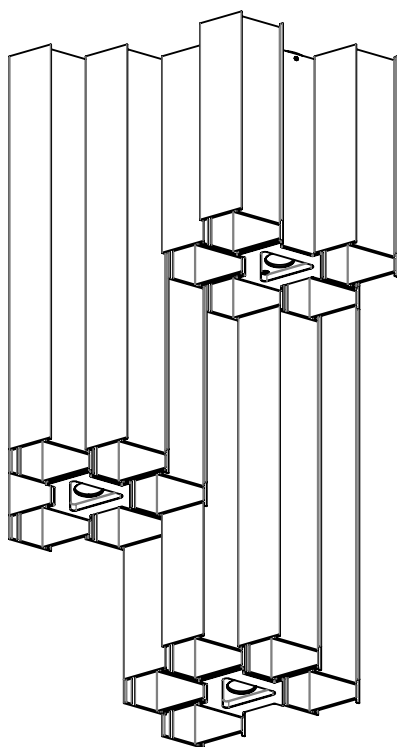

16 IN

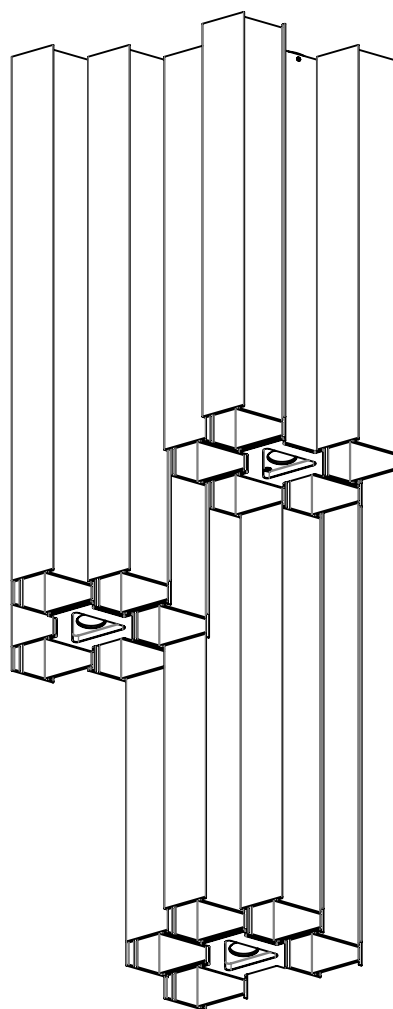


24 IN

SHOWN ARE EXAMPLES OF CONFIGURATION POSSIBILITIES. SPECIFIC FIXTURE CONFIGURATION MAY VARY.

WARNING

**A LICENSED ELECTRICIAN SHOULD PERFORM INSTALLATION.
DISCONNECT MAIN POWER AT THE SOURCE PRIOR TO INSTALLATION.**


INSTRUCTIONS MEANT FOR A REMOTE CLASS 2 DRIVER.

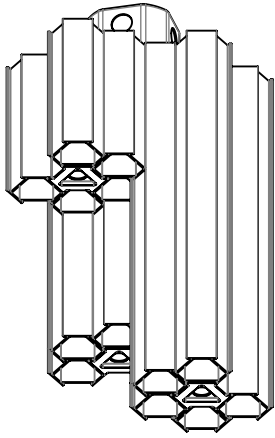POWER FEED OPTIONS**JUNCTION BOX MOUNTED**

FOR FIXTURES WIRED TO A JUNCTION BOX.

SEE **STEP 1A** FOR DETAILED INSTALLATION AND WIRING INFORMATION.

FIGURE 1

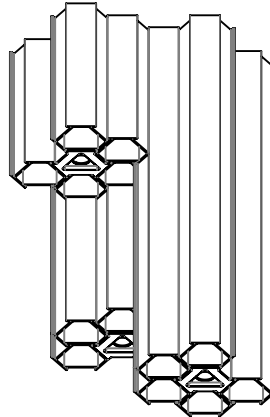**CEILING MOUNTED**

FOR FIXTURE MOUNTED DIRECTLY TO THE CEILING.

SEE **STEP 1B** FOR DETAILED INSTALLATION AND WIRING INFORMATION.

FIGURE 2

STEP 1A: JUNCTION BOX COVER PLATE INSTALLATION INSTRUCTIONS

1

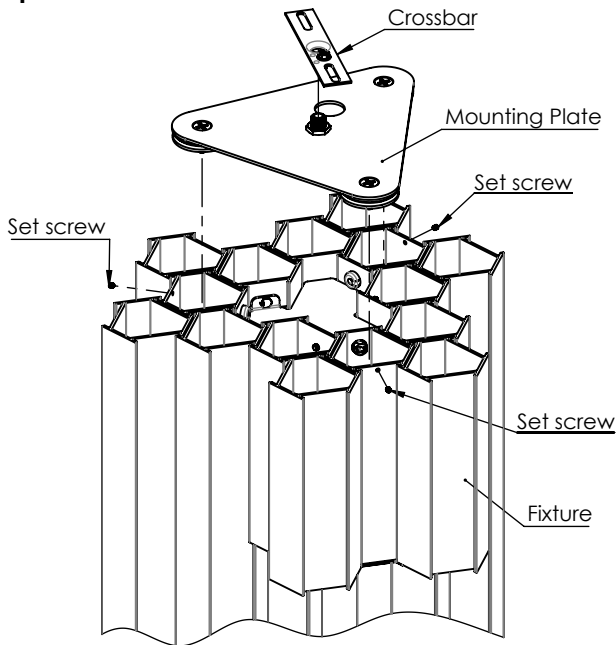


FIGURE 3

Remove set screws from fixture to release mounting plate. Unscrew crossbar to separate it from mounting plate as shown.

2

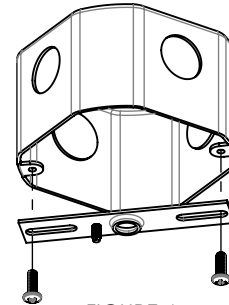


FIGURE 4

Attach the crossbar to the junction box using provided screws.

3

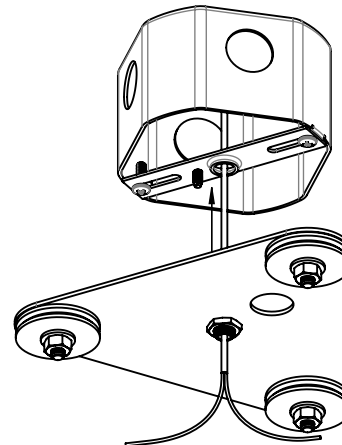


FIGURE 5

Pass low voltage wires from junction box through cross bar and through 1/8IPS rod attached to mounting plate as shown. Screw 1/8IPS rod into the crossbar to connect mounting plate to crossbar.

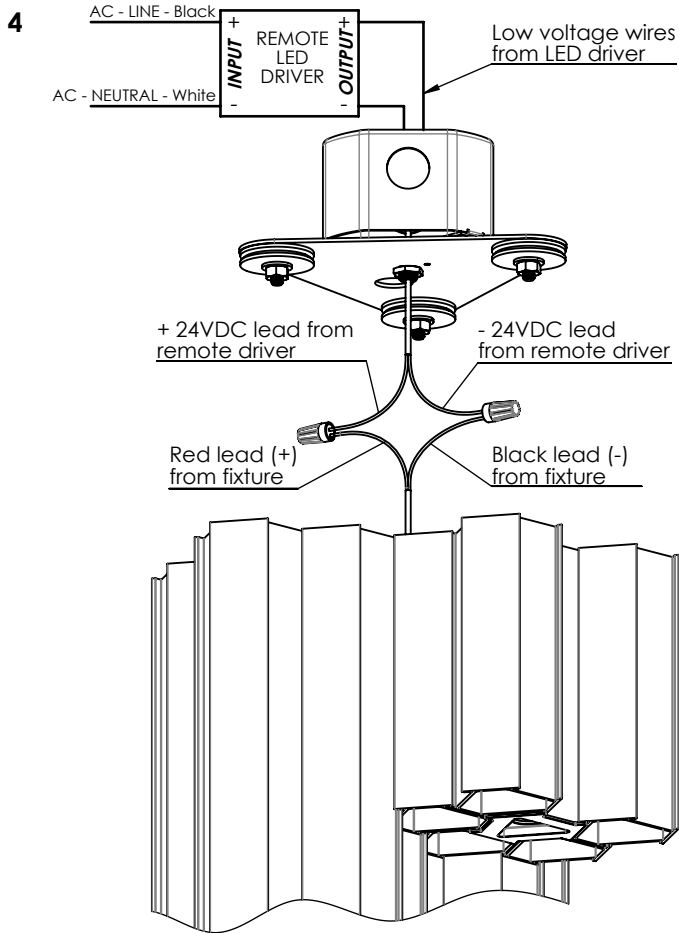


FIGURE 6

Connect wires according to diagram (wire nuts provided).
Wires to and from the driver are not included.

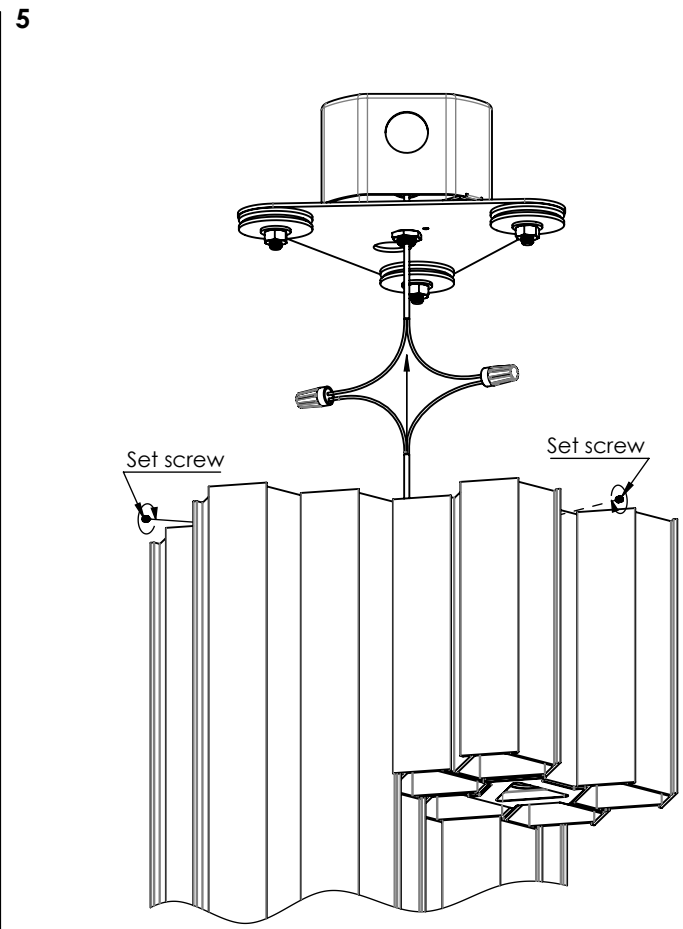


FIGURE 7

Place wires inside the top of the fixture and use set screws (removed in first instruction) to connect fixture to mounting plate.

STEP 1B: CEILING MOUNTING INSTALLATION INSTRUCTIONS

Fixture may not be able to rotate after installing in this configuration. Plan fixture's orientation prior to installation.

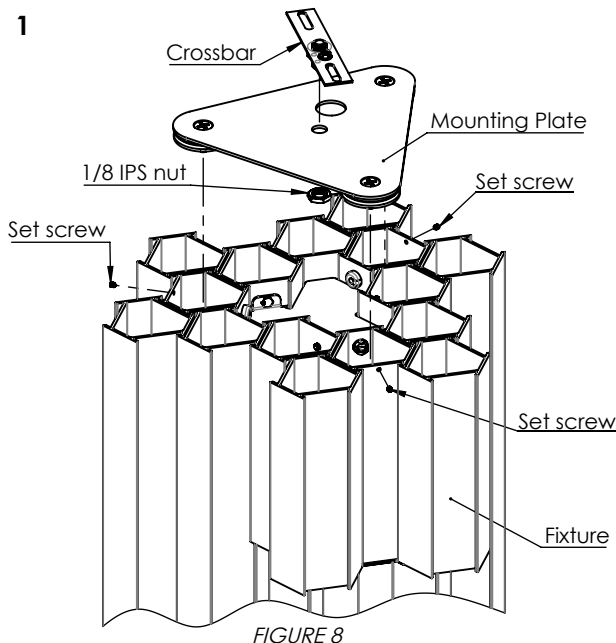


FIGURE 8

Remove set screw from fixture to release mounting plate.
 Remove nut from mounting plate to separate the top cap from cover plate.

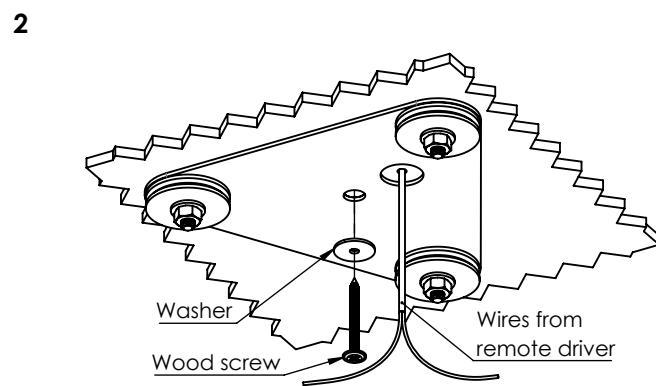


FIGURE 9

Pass low voltage wires from the remote driver through the larger hole in the mounting plate. Using provided wood screw and washer, connect the mounting plate to ceiling. Wood screws are provided for default installation. Alternate screws may be used at the recommendation of an electrician.
Blocking may be required.

3

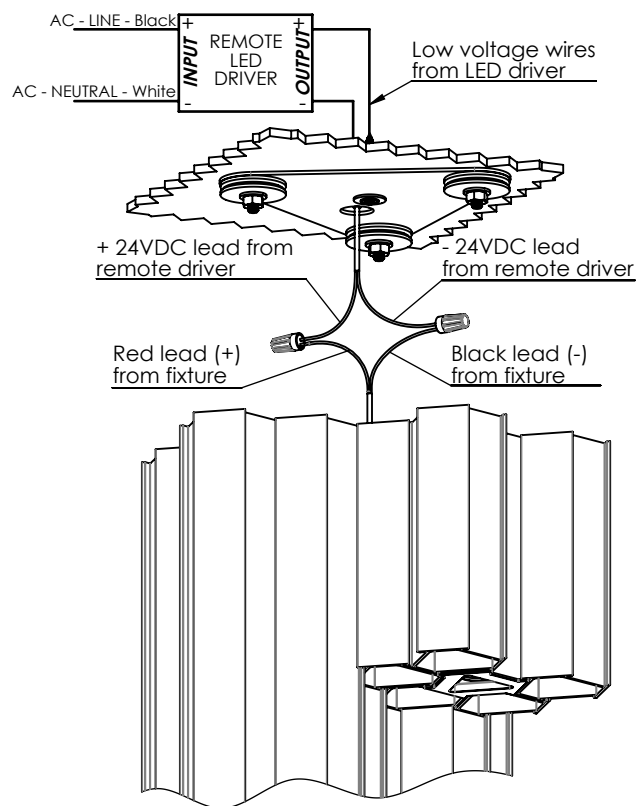


FIGURE 10

Connect wires according to diagram (wire nuts provided).
Wires to and from the driver are not included.

4

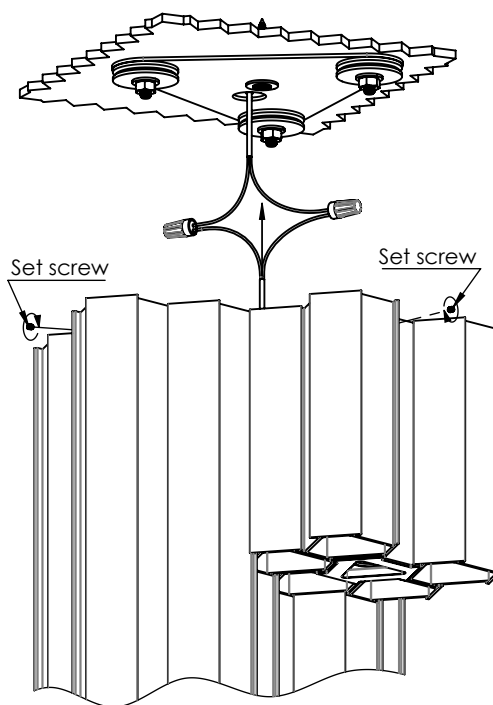


FIGURE 11

Place wires inside the top of the fixture and use set screws (removed in first instruction) to connect fixture to mounting plate.

CARE INSTRUCTIONS

Gently wipe with a damp cloth to remove dirt, dust, and fingerprints.

Do not use any chemical cleaning solution.

Use indoors only.