

CycleVault™ Instructions

CycleVault™ is a revolutionary motorcycle storage system. CycleVault™ is made with X-Film which has been manufactured with the proprietary ZERUST® corrosion inhibiting system. CycleVault™ is corrosion proof, water resistant and mold proof.

Motorcycle Storage Instructions:

- Follow manufacturer's instruction for individual motorcycle storage requirements.
- Clean and dry motorcycle - **DO NOT STORE MOTORCYCLE WET OR HOT.**
- Motorcycle should be near the same temperature as the storage area.
- To ensure proper care of your CycleVault™, make sure the storage area is a clean, smooth surface.
- Unzip the CycleVault™ and place the flap with the ZERUST® logo on the floor facing up.
- Motorcycle Placement:
 - Kickstand – Roll motorcycle on the cover eight (8) inches right of center line to compensate for motorcycle lean.
 - Center stand – Roll motorcycle down the center of the cover.
 - Either stand – Roll motorcycle twenty-four (24) inches from front of the cover.
- If motorcycle leaks, place drip pans in appropriate location. During long-term storage, check pans to ensure that they will not overflow.
- Carefully place the top half of the cover over the motorcycle and zip closed.
- If desired, use the D-Rings to pull up excess material.

YOUR MOTORCYCLE IS NOW PROTECTED FROM RUST AND CORROSION

Removing Motorcycle from Storage:

- Always follow manufacturer's instructions for post storage requirements.
- Unzip CycleVault™ and roll motorcycle off the cover.
- If any grease or oil is present on the cover, wipe clean and let dry.
- If cover is wet, let completely dry – inside and out.
- Lay cover on the ground and zip closed. Fold cover and place in storage bag.
- Store CycleVault™ in a dry location.

CycleVault™, with its patented ZERUST® corrosion inhibiting system, will prevent rust and corrosion for up to five years from the time of purchase.

**WARNING: DO NOT PUT ANY PERSON OR ANIMAL INSIDE THE CycleVault™.
SUFFOCATION AND DEATH COULD OCCUR.**

Desiccant Use

Do not take out of plastic bag until ready to use.

Purpose: Desiccant removes moisture from air sealed inside the CycleVault™.

Use: Simply place the desiccants evenly spaced throughout the CycleVault™.

Lifespan: The desiccant's lifespan is dependent upon the humidity. Check periodically. If the desiccant is saturated, replace.