



JUNIPER®


THIN Vertical Suspension Remote Installation Guide

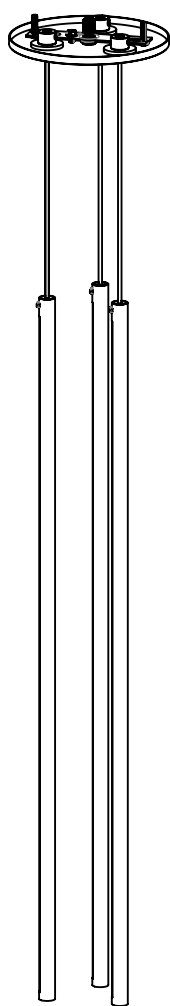

3-LIGHT TUBE
Configuration

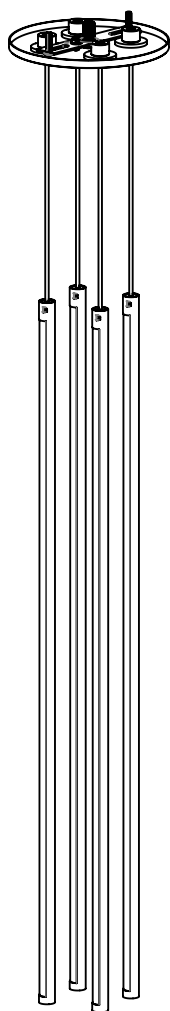

4-LIGHT TUBE
Configuration

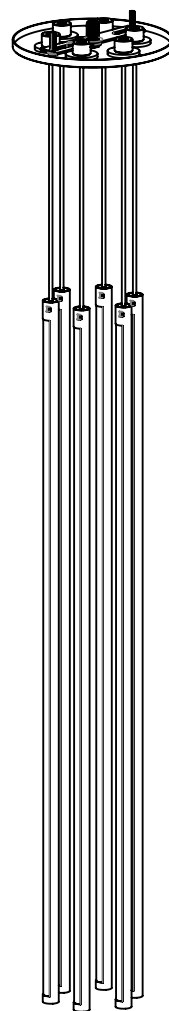

6-LIGHT TUBE
Configuration

SHOWN ARE EXAMPLES OF CONFIGURATION POSSIBILITIES. SPECIFIC FIXTURE CONFIGURATION MAY VARY.

WARNING

**A LICENSED ELECTRICIAN SHOULD PERFORM INSTALLATION.
DISCONNECT MAIN POWER AT THE SOURCE PRIOR TO INSTALLATION.**

INSTRUCTIONS MEANT FOR A REMOTE CLASS 2 DRIVER.

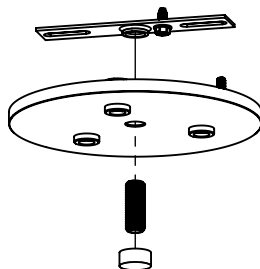
STEP 1: JUNCTION BOX COVER PLATE INSTALLATION INSTRUCTIONS**1**

FIGURE 1

Remove nut and threaded rod from the canopy cover to release the crossbar.

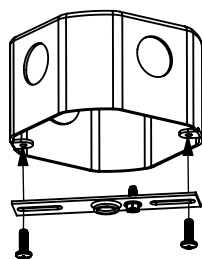
2

FIGURE 2

Attach the crossbar to the junction box using provided screws.

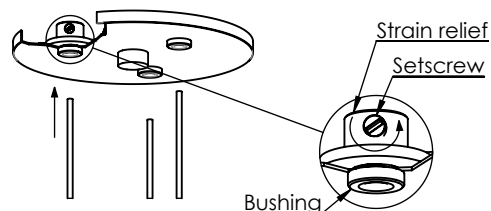
3

FIGURE 3

Loosen the set screw on the strain relief. Pass power cable, through Bushing and strain relief as shown. Adjust the length of power cord for desired suspension height. Tighten setscrew on strain relief after adjustment.

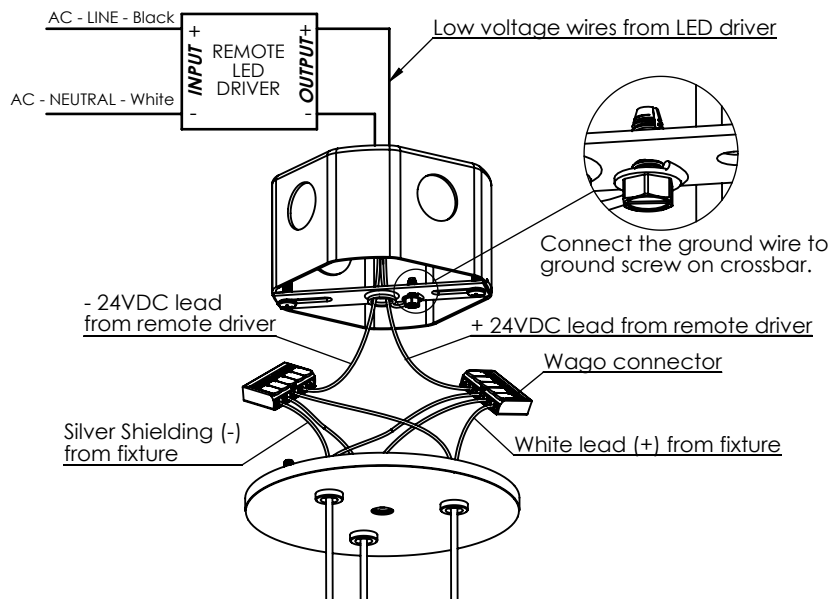
4

FIGURE 4

Connect wires according to diagram (wago connector provided). **Wires to and from the driver are not included.**

5

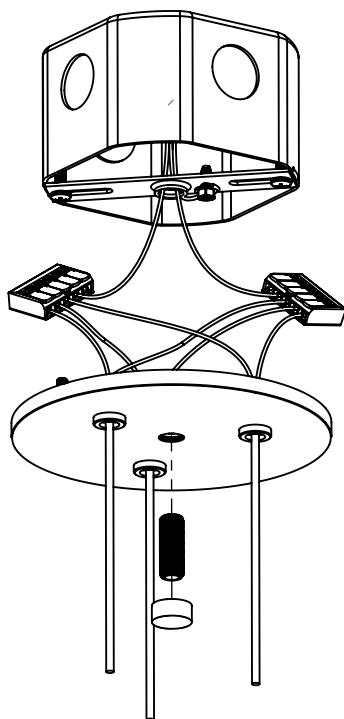


FIGURE 5

Place wires inside junction box. Screw threaded rod and nut into crossbar to attach canopy plate to junction box.

CARE INSTRUCTIONS

Brass will patina over time like other natural metals and regular care is required in order to retain the quality finish of your THIN fixture for years to come.

Gently wipe with a damp cloth to remove dirt, dust, and fingerprints.

Do not use any chemical cleaning solution.

Use indoors only.