
JUNIPER® THIN Solids Suspension Remote Installation Guide

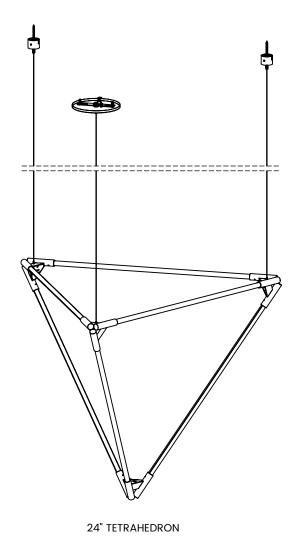


WARNING

A LICENSED ELECTRICIAN SHOULD PERFORM INSTALLATION.
DISCONNECT MAIN POWER AT THE SOURCE PRIOR TO INSTALLATION.

INSTRUCTIONS MEANT FOR A REMOTE CLASS 2 DRIVER.

STEP 1: MARK MOUNTING POINTS

Carefully mark the mounting points with a pencil or marker, using the spacing in Figure 1. It is highly recommended to use a laser alignment/ measuring tool to ensure that mounting parts are properly distanced.

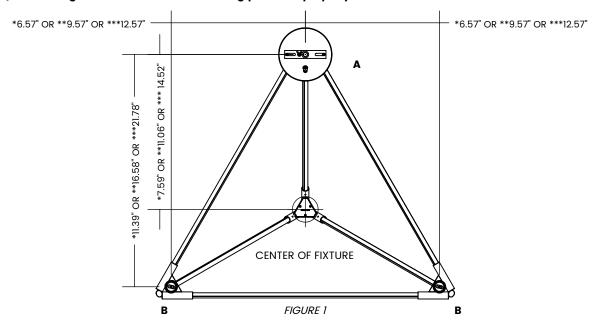

KEY

- A POWER END SUPPLIES POWER TO THE FIXTURE. CANOPY IS MOUNTED AT THE POWER END OF THE FIXTURE.
- B CEILING POST INSTALLTED AT THE NON-POWERED END OF THE FIXTURE.


Assumed as power sleeve. Mounting point measurements of all passthrough sleeves should be taken from power sleeve.

- * FOR 12" LIGHT SEGMENTS
- ** FOR 18" LIGHT SEGMENTS
- *** FOR 24" LIGHT SEGMENTS

STEP 2: ASSEMBLE LIGHT TUBES (ON THE GROUND)

- 1. Loosen the set screw on the connectors as shown
 - . Insert light tubes into the connectors as shown in figure 2.
- Tighten the set screw on the connector.

Do not suspend the fixture without tightening the set screws.

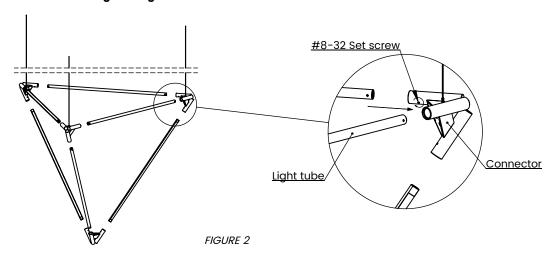

JUNIPER°

POWER FEED OPTIONS



CANOPY PLATE

FOR FIXTURES WIRED TO A JUNCTION BOX

SEE **STEP 2A** FOR DETAILED INSTALLATION AND WIRING INFORMATION.




MINI CANOPY


FOR FIXTURE MOUNTING DIRECTLY TO THE CEILING.

SEE **STEP 2B** FOR DETAILED INSTALLATION AND WIRING INFORMATION.

STEP 2A: JUNCTION BOX COVER PLATE INSTALLATION INSTRUCTIONS

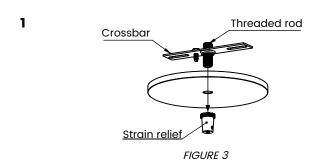

Remove strain relief from the canopy cover to release the crossbar.

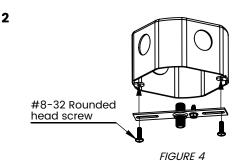

Attach the crossbar to the junction box using provided #8-32 rounded head screws.


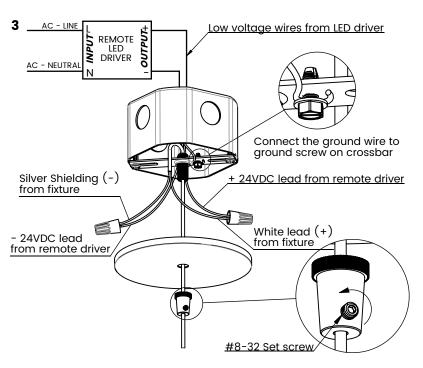


FIGURE 5


Loosen the #8-32 set screw on the strain relief. Pass power cable through threaded rod and strain relief as shown. Connect wires according to diagram (wire nuts provided). Wires to and from the driver are not included.

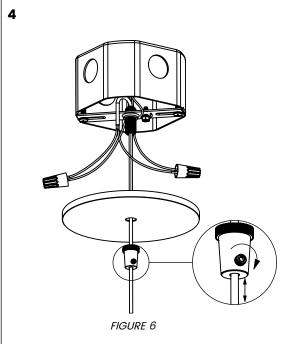

Push wires inside the junction box and screw the strain relief into threaded rod to attach canopy plate to junction box. Length of power cord should be adjusted for desired suspension height. Tighten the screw on the strain relief after adjustment.


| INFO@JUNIPER-DESIGN.COM | +1 347 799-2915 | 157 WATER STREET SOUTHINGTON, CT 06489

WWW.JUNIPER-DESIGN.COM

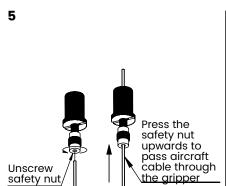

Partly loosen safety nut on cable gripper. Feed aircraft cable through the gripper. Do this for all aircraft cable ends.

FIGURE 7

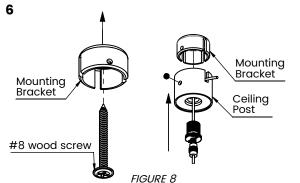

Install mounting brackets at all B and C mounting points using provided #8 wood screws. Pass the extra aircraft cable through the slot in ceiling post and screw gripper into ceiling post. Attach ceiling post to mounting bracket using provided M4 set screw.

Alternate screws may be used at the recommendation of an electrician.

recommendation of an electrician.

Use the slot on mounting bracket to make finer adjustment to mounting positions.



7

Adjust aircraft cable length as needed. Press safety nut on gripper to loosen aircraft cable. Tighten safety nut in completely when finished. Do not cut extra aircraft cable until full fixture is assembled and desired suspension height is achieved.

STEP 2B: MINI CANOPY INSTALLATION INSTRUCTIONS


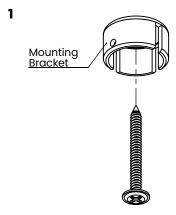


FIGURE 10

Install mounting bracket at A mounting points using provided #8 wood screws.

3

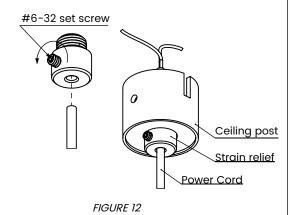

Loosen the #6-32 set screw on the strain relief. Pass power cable, through strain relief as shown.


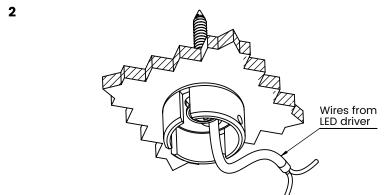


FIGURE 11

Drill a hole through the mounting bracket slot using a 1/8" drill bit, which will be used to receive low voltage wires from remotely located LED driver.

4

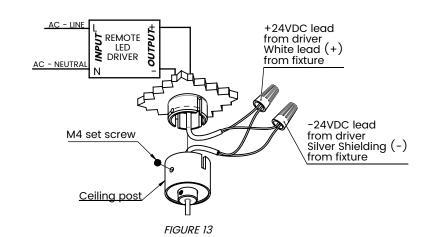


Connect wires using provided wire nuts and push the wires along with the wire nuts into the ceiling post. Attach ceiling post to mounting bracket using provided M4 set screw. Length of power cord should be adjusted for desired suspension height. Tighten the screw on the strain relief after adjustment. Wires to and from the driver are not included.

WWW.JUNIPER-DESIGN.COM | INFO@JUNIPER-DESIGN.COM | +1 347 799-2915 | 157 WATER STREET SOUTHINGTON, CT 06489

JUNIPER°

STEP 4: ADJUSTING THE LIGHT TUBES

- Loosen the set screw on the connectors as shown. **Do not loosen set screws on all connectors simultaneously. Adjust only one light tube at a time**. Rotate the light tube to change the direction of the light. Tighten the set screws on the connector. 1.

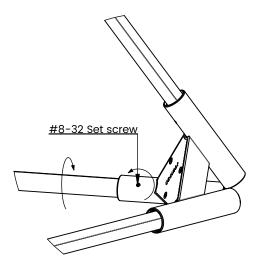

CARE INSTRUCTIONS

Brass will patina over time likeother natural metals and regular care is required in order to retain the quality finish of your THIN fixture for years to come.

Gently wipe with a damp cloth to remove dirt, dust, and fingerprints.

Do not use any chemical cleaning solution.

Use indoors only.

WWW.JUNIPER-DESIGN.COM +1 347 799-2915 INFO@JUNIPER-DESIGN.COM 157 WATER STREET SOUTHINGTON, CT 06489