
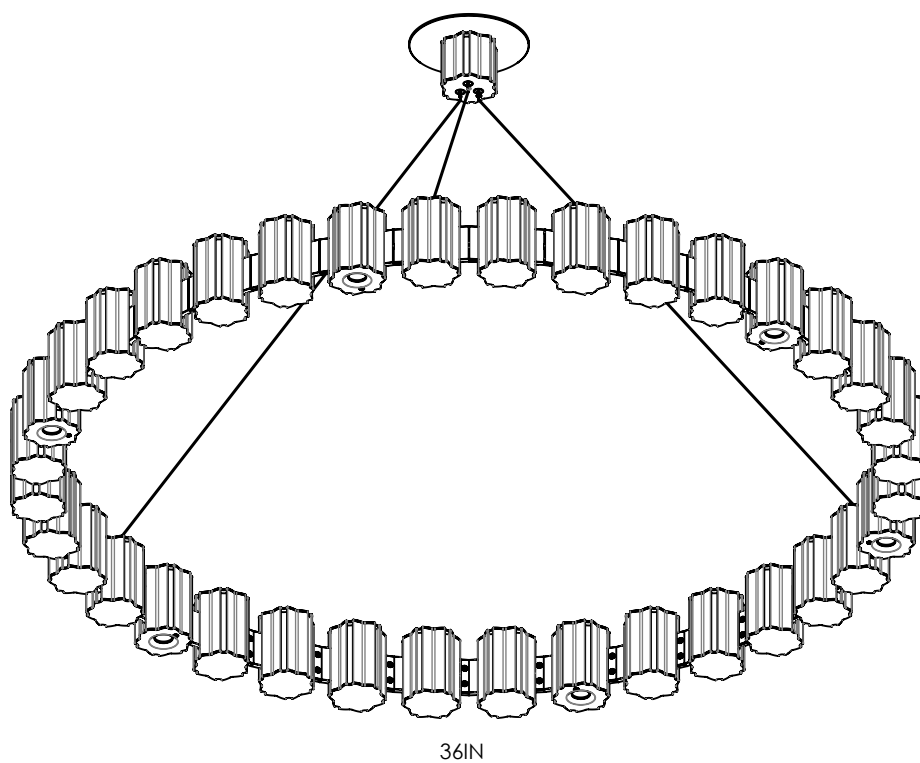


JUNIPER®

FLUTES IONIAN ARRAY


Remote Installation Guide

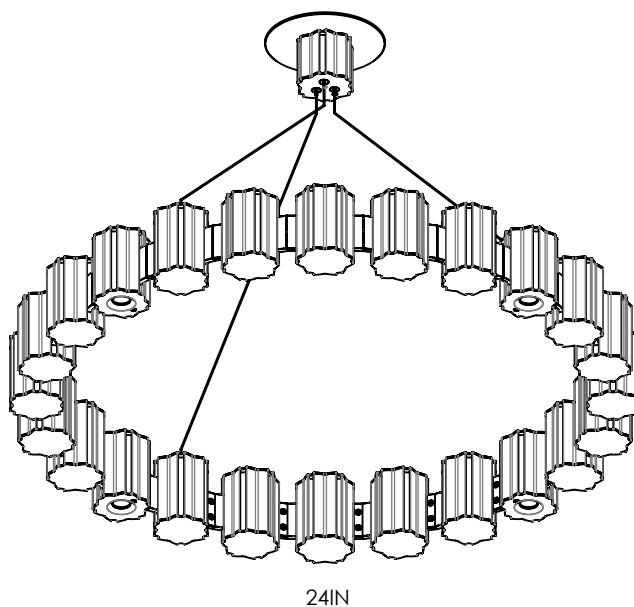

WARNING

**A LICENSED ELECTRICIAN SHOULD PERFORM INSTALLATION.
DISCONNECT MAIN POWER AT THE SOURCE PRIOR TO INSTALLATION.**


INSTRUCTIONS MEANT FOR A REMOTE CLASS 2 DRIVER.

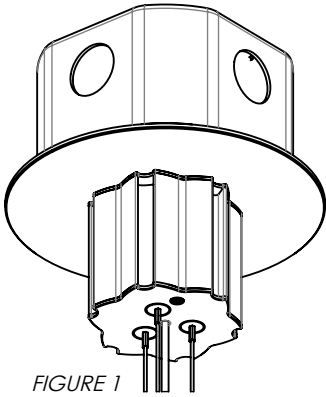POWER FEED OPTIONS**JUNCTION BOX MOUNTED**

FOR FIXTURES WIRED TO A JUNCTION BOX.

SEE **STEP 1A** FOR DETAILED INSTALLATION AND WIRING INFORMATION.

FIGURE 1

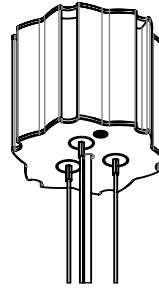**CEILING MOUNTED**

FOR FIXTURE MOUNTED DIRECTLY TO THE CEILING.

SEE **STEP 1B** FOR DETAILED INSTALLATION AND WIRING INFORMATION.

FIGURE 2

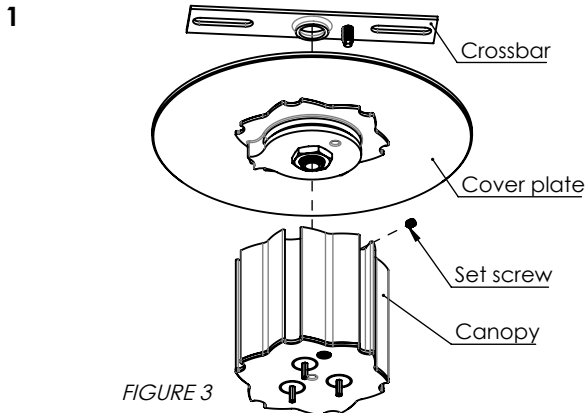
STEP 1A: JUNCTION BOX COVER PLATE INSTALLATION INSTRUCTIONS

FIGURE 3

Remove set screw from canopy to release cover plate. Unscrew crossbar to separate it from cover plate as shown.

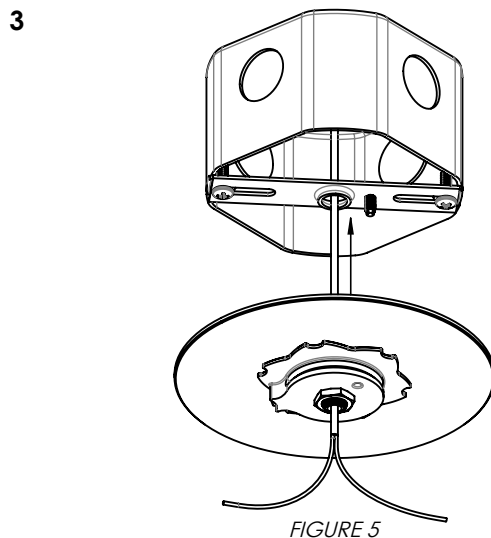


FIGURE 5

Pass low voltage wires from junction box through cross bar and through 1/8IPS rod attached to cover plate as shown. Screw 1/8IPS rod into the crossbar to connect cover plate to crossbar.

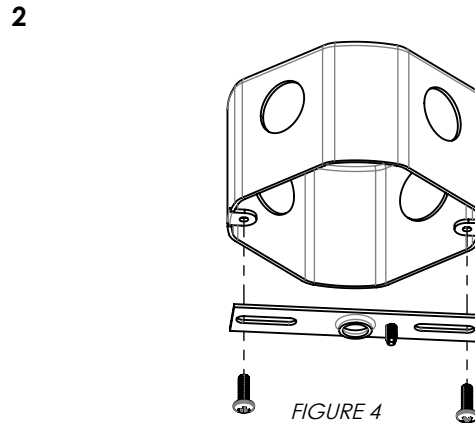


FIGURE 4

Attach the crossbar to the junction box using provided screws.

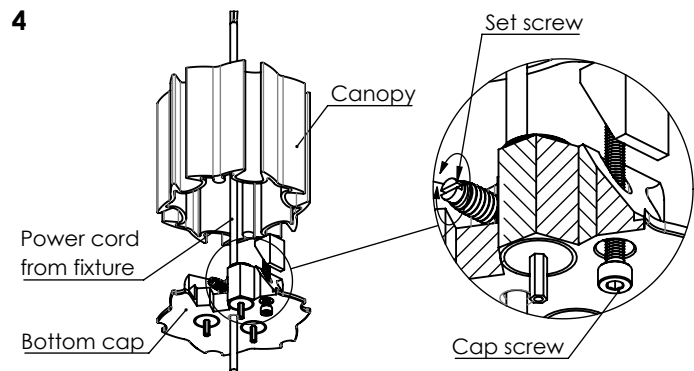


FIGURE 6

Loosen cap screw in bottom cap to release the bottom cap. Pass power cord from fixture through the cap and canopy as shown. Adjust the length of power cord, suitable for fixture's drop height. Tighten set screw after adjusting power cord length. Attach bottom cap by tightening the cap screw. **Do not cut extra power cable before making sure the its length is suitable for fixture's drop height.** **Make sure bottom cap and canopy are aligned properly before securing cap screw.**

4

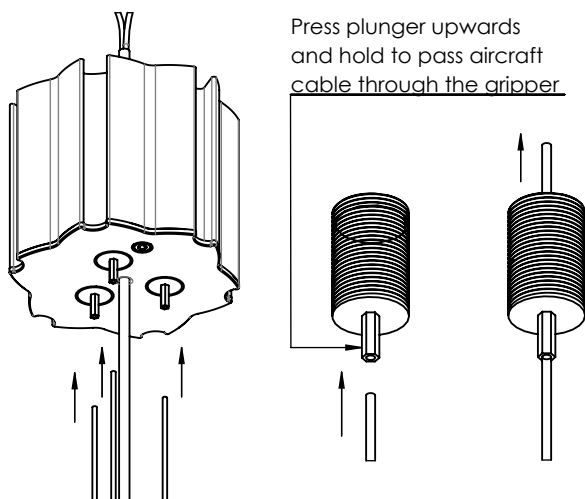


FIGURE 6

Feed aircraft cables through the grippers as shown above. Keep the plunger on gripper pressed to pass aircraft cable through the gripper. Release the plunger to hold the aircraft cable in position.

5

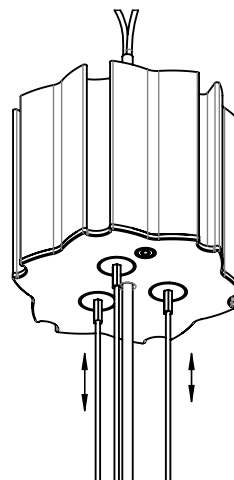


FIGURE 7

Adjust aircraft and power cable length as needed. **Do not cut extra power and aircraft cables until desired suspension height is achieved.**

6

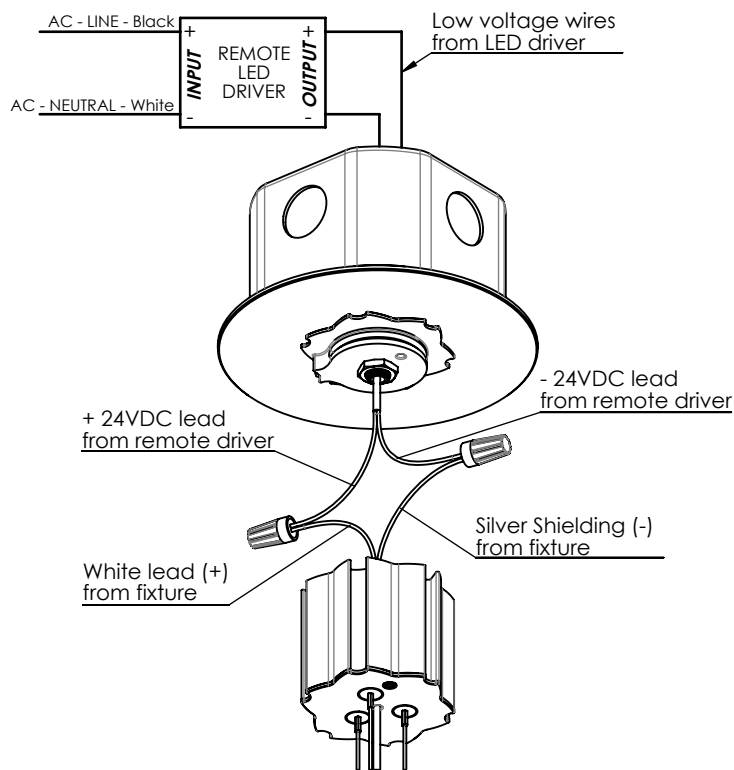


FIGURE 8

Connect wires according to diagram (wire nuts provided). **Wires to and from the driver are not included.**

7

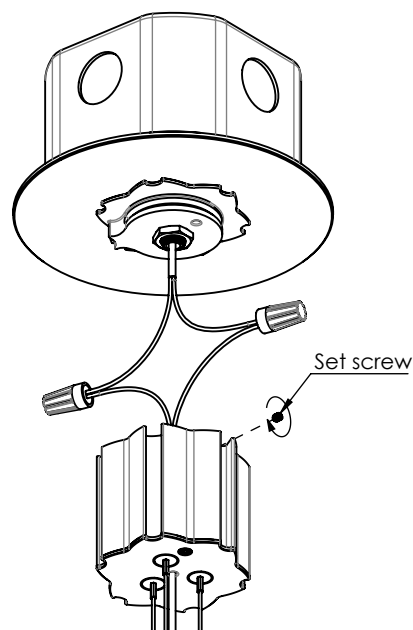


FIGURE 9

Push wires inside the fixture and use set screw (removed in first instruction) to connect canopy to cover plate.

STEP 1B: CEILING MOUNTING INSTALLATION INSTRUCTIONS

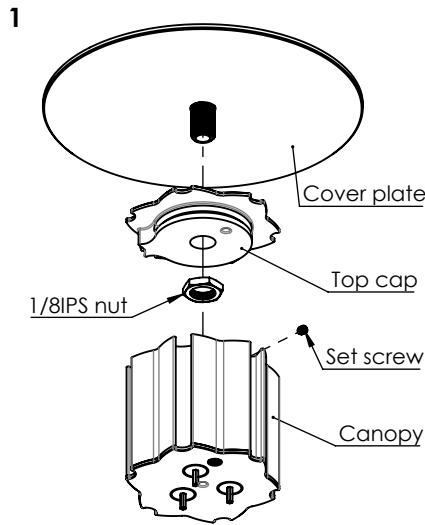


FIGURE 10

Remove set screw from canopy to release cover plate. Remove nut from cover plate to separate the top cap from cover plate.

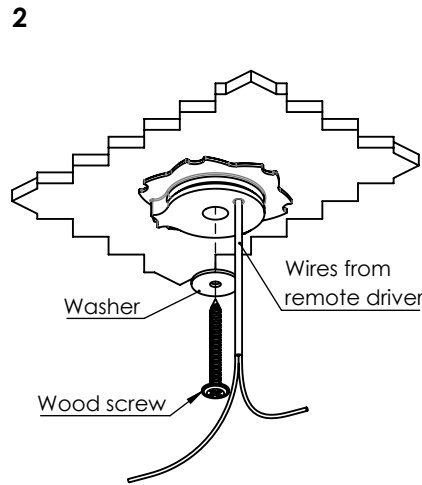


FIGURE 11

Pass low voltage wires from the remote driver through the smaller hole in the top cap. Using provided wood screw and washer, connect the top cap to ceiling. Wood screws are provided for default installation. Alternate screws may be used at the recommendation of an electrician. **Blocking may be required.**

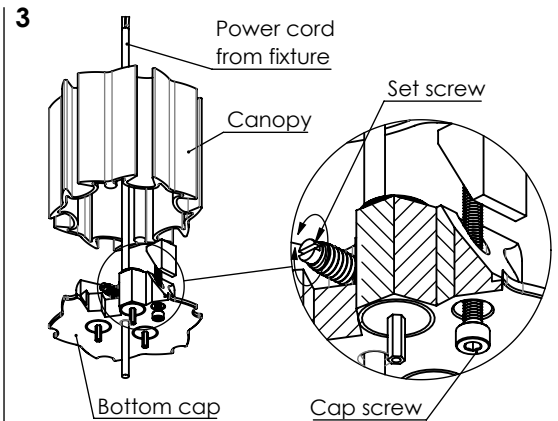


FIGURE 12

Loosen cap screw in bottom cap to release the bottom cap. Pass power cord from fixture through the cap and canopy as shown. Adjust the length of power cord to adjust fixture's drop height. Tighten set screw after adjusting power cord length. Attach bottom cap by tightening the cap screw. **Do not cut extra power cable before making sure its length is suitable for fixture's drop height. Make sure bottom cap and canopy are aligned properly before securing cap screw**

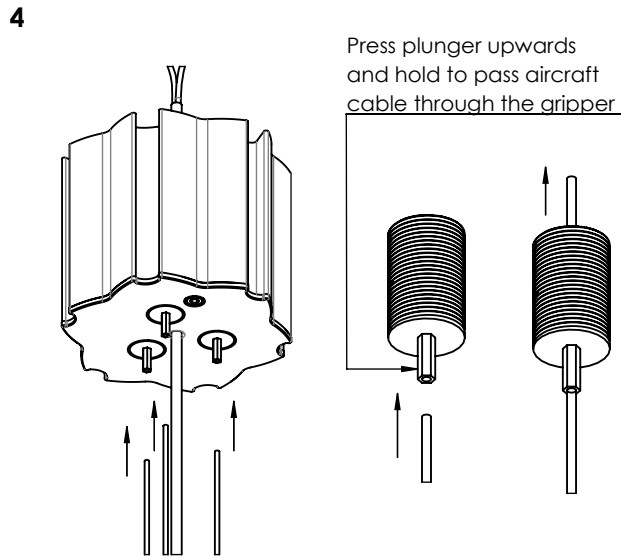


FIGURE 13

Feed aircraft cables through the grippers as shown above. Keep the plunger on gripper pressed to pass aircraft cable through the gripper. Release the plunger to hold the aircraft cable in position.

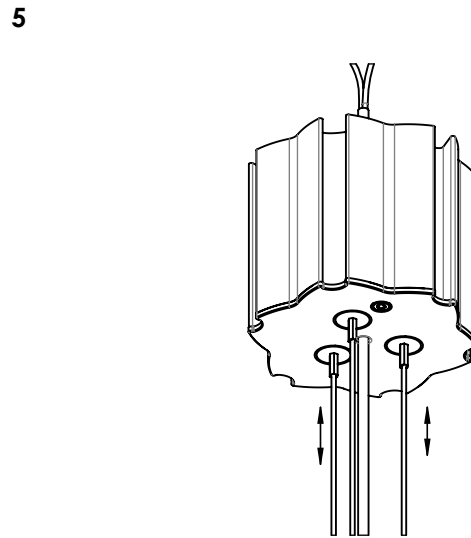


FIGURE 14

Adjust aircraft and power cable length as needed. **Do not cut extra power and aircraft cables until desired suspension height is achieved.**

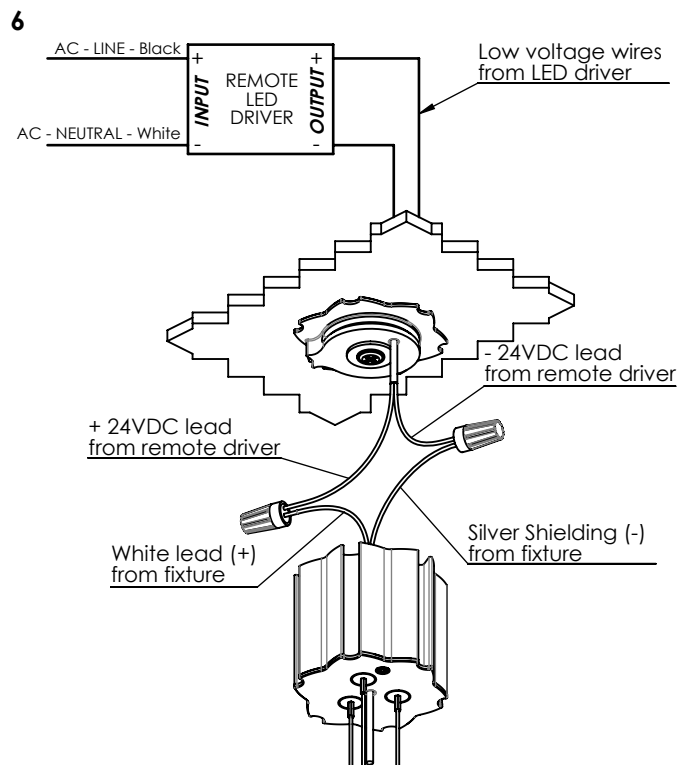


FIGURE 15

Connect wires according to diagram (wire nuts provided).
Wires to and from the driver are not included.

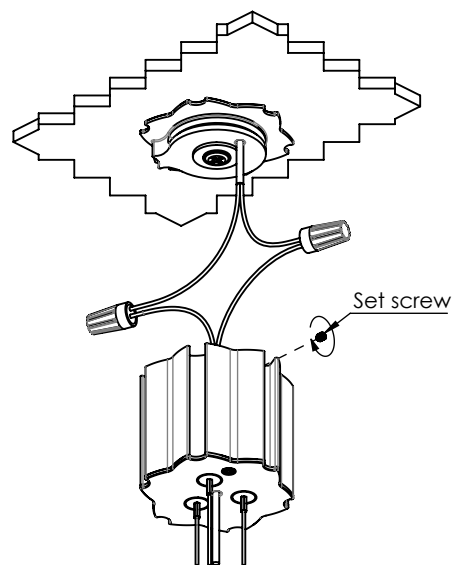
7

FIGURE 16

Push wires inside the fixture and use set screw (removed in first instruction) to connect canopy to cover plate.

CARE INSTRUCTIONS

Gently wipe with a damp cloth to remove dirt, dust, and fingerprints.

Do not use any chemical cleaning solution.

Use indoors only.